


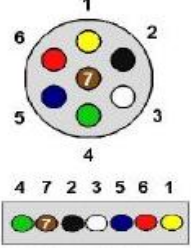







PROBLEM:	DESCRIPTION:	ACTION:
No Power	No red light, No power on screen	<ul style="list-style-type: none"> • Check the 7-Pin plug on trailer and vehicle is connected properly. • Check fuses in Remscale box. Replace with 3 amp fuse. • Reboot system - turn vehicle lights off and back on again. • Connect Yellow Kelpie to a different vehicle to isolate if the problem is on the trailer, or in the vehicle.
Error Code	<p>E0001 Low Power</p>	<ul style="list-style-type: none"> • Not enough voltage is being supplied to the scales. • Repeat Actions for "No Power" as above. • Use a Multimeter to check for 12 volts at the 7-Pin plug on the vehicle Pin 3 - Earth, Pin - 7 - Tail lights, with lights turned on • Check for damaged wiring and or broken lights for an earth short. • Check 12 Pin plug at the bottom of the Remscale box disconnect plug and blow out any dirt or moisture check for loose wires in and around the 12 Pin plug <div style="display: flex; align-items: center;">  <div style="margin-left: 20px;"> <p>1 - Left Hand Turn [Yellow]</p> <p>2 - Reverse [Black]</p> <p>3 - Earth [White]</p> <p>4 - Right Hand Turn [Green]</p> <p>5 - Electric Brakes [Blue]</p> <p>6 - Stop [Red]</p> <p>7 - Tail [Brown]</p> </div>  </div>
Error Code	<p>E2000 ULOAD Weights floating up and down</p>	<ul style="list-style-type: none"> • Scales are not reading the loadcells properly. • Repeat Actions for "Low Power" as above. • Check the indicator screen is tight in the bracket and does not move up and down loosley. If loose, remove the indicator from the Remscale box and tighten screws on the side of the bracket. • Check Deutscher plugs behind the indicator screen. disconnect plugs and blow out any dirt or moisture check for loose wires in and around the Deutscher plugs <div style="display: flex; justify-content: space-around;">   </div>
Remote control not working	Green light does not come on Red power light is on	<ul style="list-style-type: none"> • Press f 3 button on indicator screen - does the green light come on and actuator open? Yes / No? Yes: Check and replace battery in remote control handset and try again. No: Check position of Flow Rate dial. Make sure the dial is set to 5 or greater. Setting 1 or 2 does not open the door very far • Still not working? Call Yellow Kelpie for assistance. <div style="display: flex; justify-content: space-around;">   </div>

PROBLEM:	DESCRIPTION:	ACTION:
Actuator does not open	Green light comes on	<ul style="list-style-type: none"> • Check position of Flow Rate dial. Make sure the dial is set to 5 or greater. Setting 1 or 2 does not open the door very far. • Disconnect actuator from ground feed door. Does actuator work now? • Check to see if ground feed door is free to open by hand and not tight. • Use a Multimeter to check for 12 volts at the Deutscher plug where the actuator plugs in. Press remote control when checking voltage. • Check Relays located behind the instructions in the Remscale box. • Pull the relays out and swap positions around and push back in again. • Still not working? Call Yellow Kelpie for assistance. <div style="display: flex; justify-content: space-around; align-items: center;">   </div>
New Remote Handset	Sync to Remscale	<ul style="list-style-type: none"> • Remove the instruction cover inside the Remscale box. • Plug red cord into the Handset and Remscale ports with the power on. • Red light will come on the handset. • Press remote button for 1 second, light will blink twice on the handset. • Pairing is complete. Unplug the cord and test handset to see if working. <div style="text-align: center;">  </div>

CONTACT DETAILS:
Yellow Kelpie 03- 5335 9811
Anmar Scales 03- 5335 6715